


### 3. Amplify the error signals to generate correction voltages.

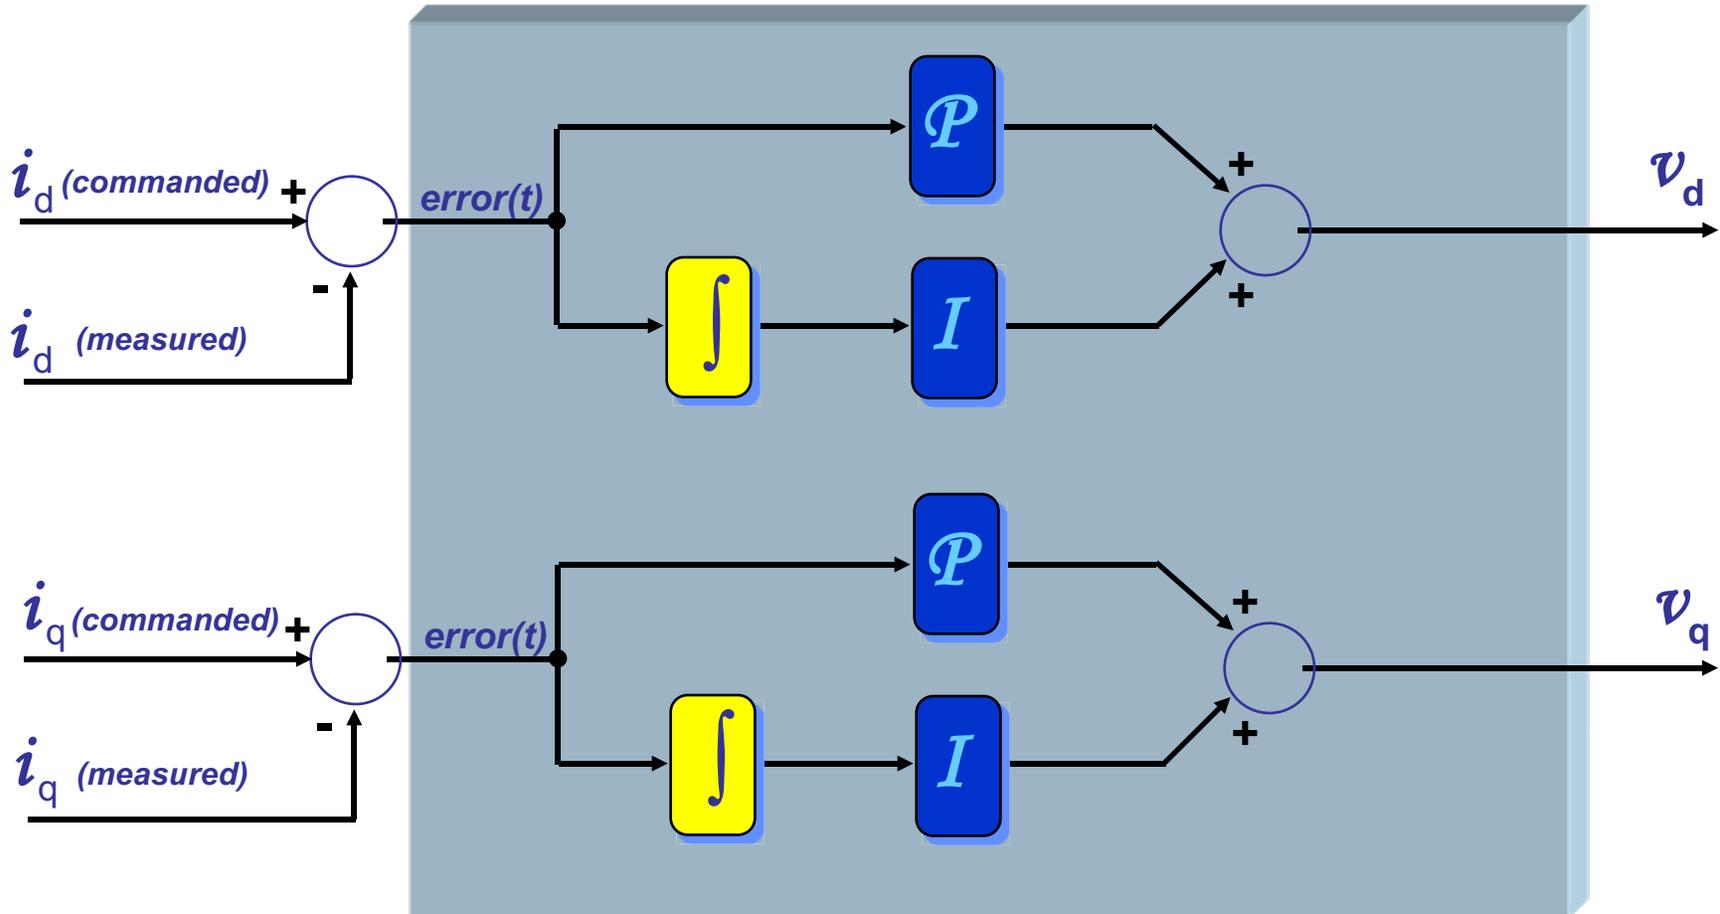

**The PI regulator is a good choice for current regulation**

